


How to enable VoLTE on the phone?

1. iPhone


- iPhone (4G LTE-only models)




Go to Settings

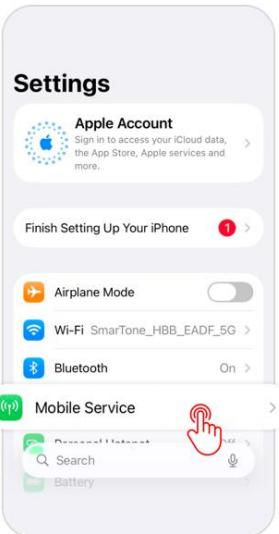


Tab Mobile Service

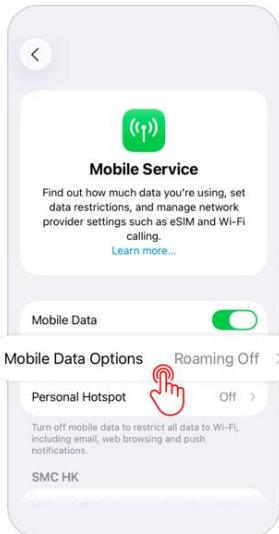


Tab Mobile Data Options

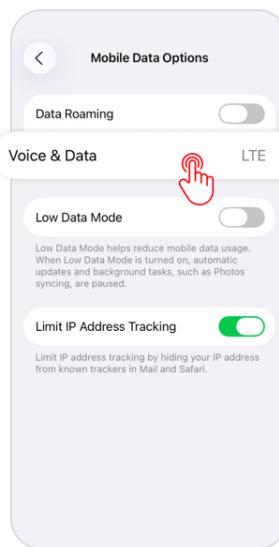

Tab Voice & Data

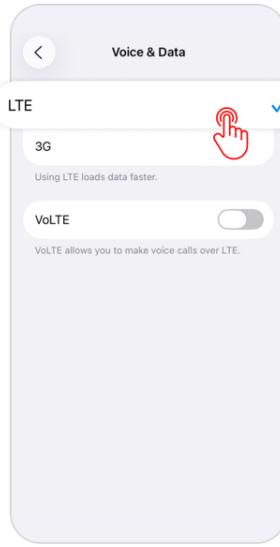

Select LTE

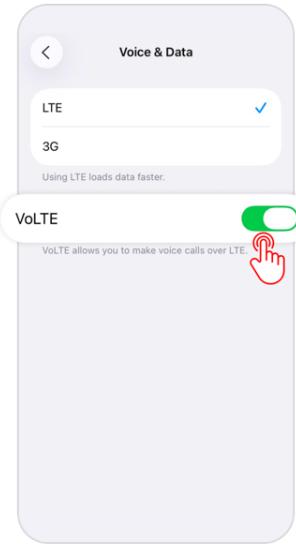


Enable VoLTE


- iPhone (5G-supported models)



Go to Settings

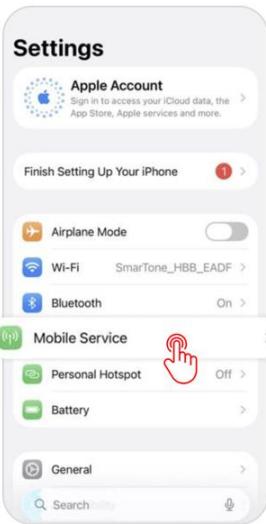

Tab Mobile Service

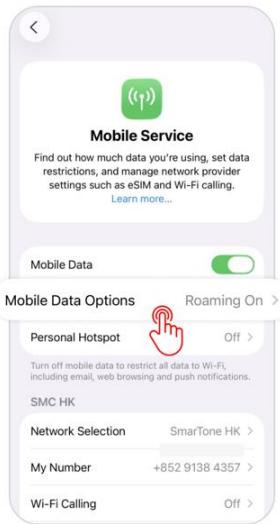

Tap Mobile Data Options
(If you're using dual SIM, tab
your ValueGB mobile number)




Tab Voice & Data



Select 5G Auto/ 5G On/ LTE and
turn off 2G for making and
receiving calls

2. Android and Other Devices

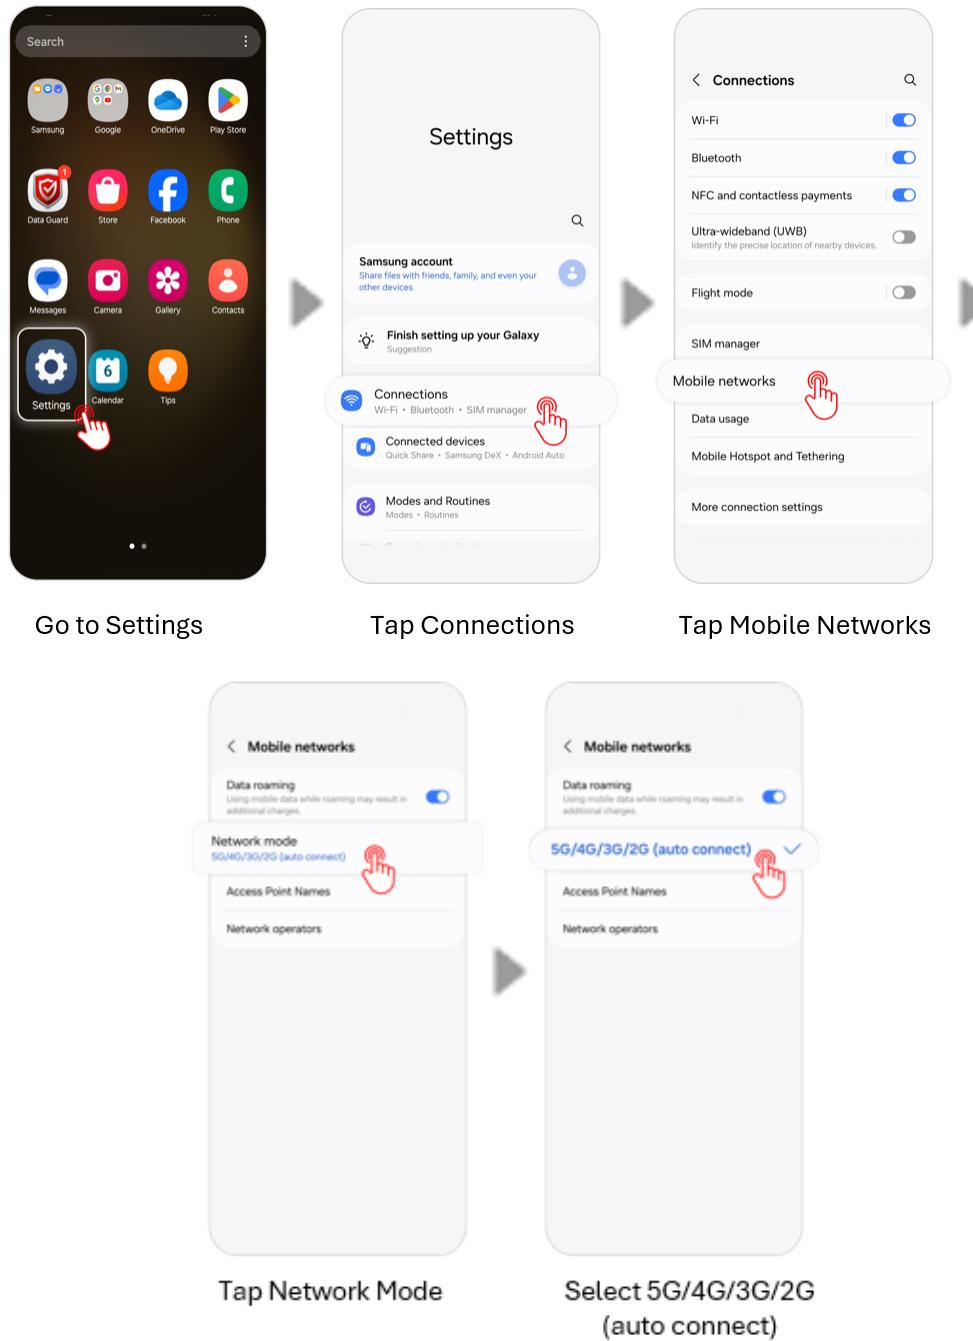

Note: Actual setup steps may vary by phone brand, model, and operating system version. For assistance, please contact us or your handset manufacturer.